 


HOW TO MAKE CUSTOM FIELDS EDITABLE ON A TML



1. Open up TracMap Online and navigate to the “ADMIN” tab.



2. In the sub tabs select the “Display Units”.



3. Here you can select “Job Options” at the top left hand corner of the page. This will open a pop up screen.

Configure Auto Job [Close]

Display Units Auto Create Jobs
Auto Job allows display units to automatically start a job when spreading is turned on. This affects display units whose primary user or owner is your account.
Enable for TMS
Enable for TML

Automatically Filter Small Jobs Submitted from Display Units
Enable
Filter out if length is shorter than mins
or
Filter out if area is smaller than ha

Display Unit Editing Options
These switches control whether the corresponding fields are editable on TML display units. They apply to display units whose primary user or owner is your account.
Allow custom fields to be edited
Allow products to be edited

Cancel OK

4. Here you can change a few things to do with the display units. At the bottom of the page you have the option to make custom fields editable labelled “Allow custom fields to be edited”. Once you have ticked this, select “OK” and then that change should be made.